


EN StudSensor™ HD55 Stud Finder

The StudSensor™ HD55 features two scanning modes:


- StudScan: Locates the edges of wood and metal studs up to 19 mm deep
- DeepScan™: Locates the edges of wood and metal studs up to 38 mm deep

WireWarning™ detection automatically detects the presence of live AC wires. When AC voltage is detected, the AC WireWarning® icon will be displayed on screen.

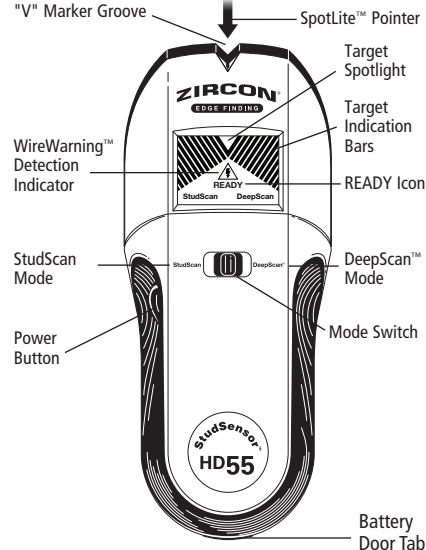

1. INSTALLING THE BATTERY

Push in the battery door tab at the bottom of the tool and open the door. Insert a new 9V battery, matching the positive (+) and negative (-) terminals to the icons printed on the back. Snap the battery into place and replace the door.

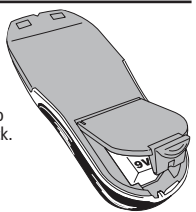

2. OPERATING TIPS

For optimum scanning results:

- Hold the tool straight up and down, parallel to the studs, and do not rotate the tool.
- Keep tool flat against the wall and do not rock, tilt, or press hard when slowly sliding across the surface being scanned.
- Avoid placing your other hand, or any other part of your body, on the surface being scanned.
- Depending on the proximity of electrical wiring or pipes to the wall surface, the scanner may detect them in the same manner as studs. Caution should always be used when nailing, cutting, or drilling in walls, floors, and ceilings that may contain these items.
- To avoid surprises, remember that studs or joists are normally spaced 41 or 61 cm apart and are 38 mm in width. **Anything closer together or a different width may not be a stud, joist, or firebreak.**

If you're receiving erratic scanning results, it may be a result of humidity, moisture within the wall cavity or drywall, or recently applied paint or wallpaper that hasn't fully dried. While the moisture may not always be visible, it will interfere with the tool's sensors. Please allow a few days for the wall to dry out.

⚠ WARNING Do not rely exclusively on the detector to locate items behind the scanned surface. Use other information sources to help locate items before penetrating the surface. Such additional sources include construction plans, visible points of entry of pipes and wiring into walls, such as in a basement, and in standard 41 and 61 cm stud spacing practices.

Always turn off the power when working near electrical wires.

SCANNING DIFFERENT SURFACES

StudSensor™ HD55 is for use on dry interior walls only.

Note: Sensing depth and accuracy can vary due to moisture, content of materials, wall texture, and paint.

StudSensor™ HD55 can scan effectively through most sheet materials, including:

- Bare wood flooring (in DeepScan™ mode)
- Linoleum on wood base
- Gypsum drywall over plywood sheathing
- Wallpapered walls (if dry)
- Textured ceilings if uniform thickness (place a thin piece of cardboard on ceiling and scan over it to avoid damage to texturing)
- StudSensor™ HD55 is not designed to scan materials such as:
 - Ceramic floor tile
 - Carpeting and padding
 - Wallpaper with metallic fibers
 - Freshly painted walls that are still damp (may take one week or longer to dry after application)
 - Lath and plaster walls
 - Foil covered insulation board
 - Glass or any other dense material
 - Concrete

3. SELECTING THE MODE


Move selector switch to the desired mode: StudScan for finding wood or metal studs or DeepScan™ for finding studs behind walls more than 19 mm thick.

Unit will remain off if Power button is not depressed.

4. FINDING A STUD

Always scan for studs with the scanner placed flat against the wall. Move the mode switch to StudScan, place the tool flat against the wall, then press and hold the Power button. Wait for beep to confirm calibration has completed before moving scanner.


Continue to hold the Power button, then slowly slide unit horizontally across the wall, left or right. As you begin to approach a stud, the outer Target Indication bars will begin to turn on.

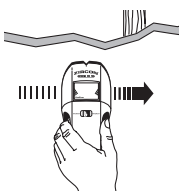

When the full Target Indication bars are first displayed across the display, the SpotLite™ Pointer and Target Spotlight shine, and a steady tone sounds, you have located the edge of the stud. Mark this spot.



Without releasing the Power button, continue scanning beyond the marked spot until some Target Indication bars turn off. Slide unit in the reverse direction to locate the other edge of stud.

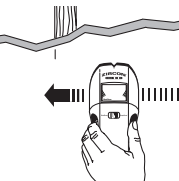


Mark this second spot. Centre of stud is midway between the two marks.



5. WIREWARNING™ DETECTION

WireWarning™ detection works continuously in StudScan and DeepScan™ modes. When live AC voltage is detected, the WireWarning™ indicator will appear on the display. If scanning begins over a live AC wire, the WireWarning™ indicator will flash continuously. Use extreme caution in these circumstances or whenever live AC is present.

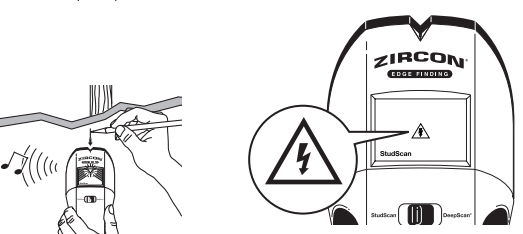

⚠ WARNING Electrical field locators may not detect live AC wires if wires are more than 51 mm from the scanned surface, in concrete, encased in conduit, present behind a plywood shear wall or metallic wall covering, or if moisture is present in the environment or scanned surface.

⚠ WARNING DO NOT ASSUME THERE ARE NO LIVE ELECTRICAL WIRES IN THE WALL. DO NOT TAKE ACTIONS THAT COULD BE DANGEROUS IF THE WALL CONTAINS A LIVE ELECTRICAL WIRE. ALWAYS TURN OFF THE ELECTRICAL POWER, GAS, AND WATER SUPPLIES BEFORE PENETRATING A SURFACE. FAILURE TO FOLLOW THESE INSTRUCTIONS MAY RESULT IN ELECTRIC SHOCK, FIRE, AND/OR SERIOUS INJURY OR PROPERTY DAMAGE.

DeepScan, SpotLite, StudSensor, WireWarning, and Zircon are registered trademarks or trademarks of Zircon Corporation.

Visit www.zircon.com/support for the most current instructions.

ZIRCON

LIMITED 1 YEAR WARRANTY

Zircon Corporation, ("Zircon") warrants this product to be free from defects in materials and workmanship for one years from the date of purchase. Any in-warranty defective product returned to Zircon™, freight prepaid with proof of purchase date and \$5.00 to cover postage and handling, will be repaired or replaced at Zircon's option. This warranty is limited to the electronic circuitry and original case of the product and specifically excludes damage caused by abuse, unreasonable use or neglect. This warranty is in lieu of all other warranties, express or implied, and no other representations or claims of any nature shall bind or obligate Zircon. Any implied warranties applicable to this product are limited to the one year period following its purchase. IN NO EVENT WILL ZIRCON BE LIABLE FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM POSSESSION, USE OR MALFUNCTION OF THIS PRODUCT.

In accordance with government regulations, you are advised that: (i) some states do not allow limitations on how long an implied warranty lasts and/or the exclusion or limitation of incidental or consequential damages, so the above limitations and/or exclusions may not apply to you, and further (ii) this warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Return product freight prepaid with proof of purchase date (dated sales receipt) and \$5.00 to cover postage and handling, to:
Zircon Corporation
*Attn: Returns Department
1580 Dell Avenue
Campbell, CA 95008-6992 USA

Be sure to include your name and return address. Out of warranty service and repair, where proof of purchase is not provided, shall be returned with repairs charged C.O.D. Allow 4 to 6 weeks for delivery.

Customer Service, 1-800-245-9265 or 1-408-963-4550
Monday–Friday, 8:00 a.m. to 5:00 p.m. PST
www.zircon.com • info@zircon.com

f ZirconCorporation **u** YouTube ZirconTV
t ZirconTools | ZirconToolPro **W** ZirconTools


© 2015 Zircon Corporation • PIN 66283 • Rev A 02/15

EN StudSensor™ HD55 Stud Finder

The StudSensor™ HD55 features two scanning modes:


- StudScan: Locates the edges of wood and metal studs up to 19 mm deep
- DeepScan™: Locates the edges of wood and metal studs up to 38 mm deep

WireWarning™ detection automatically detects the presence of live AC wires. When AC voltage is detected, the AC WireWarning® icon will be displayed on screen.

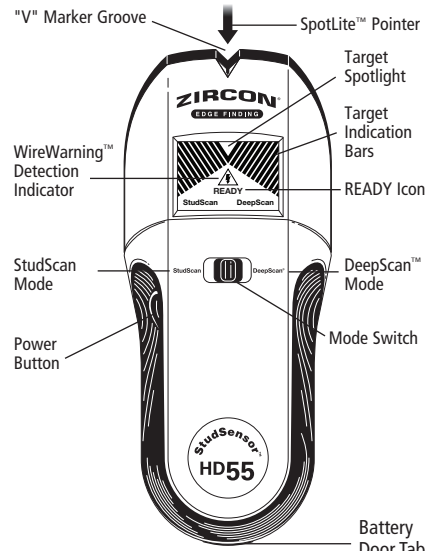

1. INSTALLING THE BATTERY

Push in the battery door tab at the bottom of the tool and open the door. Insert a new 9V battery, matching the positive (+) and negative (-) terminals to the icons printed on the back. Snap the battery into place and replace the door.

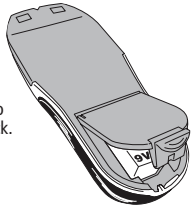

2. OPERATING TIPS

For optimum scanning results:

- Hold the tool straight up and down, parallel to the studs, and do not rotate the tool.
- Keep tool flat against the wall and do not rock, tilt, or press hard when slowly sliding across the surface being scanned.
- Avoid placing your other hand, or any other part of your body, on the surface being scanned.
- Depending on the proximity of electrical wiring or pipes to the wall surface, the scanner may detect them in the same manner as studs. Caution should always be used when nailing, cutting, or drilling in walls, floors, and ceilings that may contain these items.
- To avoid surprises, remember that studs or joists are normally spaced 41 or 61 cm apart and are 38 mm in width. **Anything closer together or a different width may not be a stud, joist, or firebreak.**

If you're receiving erratic scanning results, it may be a result of humidity, moisture within the wall cavity or drywall, or recently applied paint or wallpaper that hasn't fully dried. While the moisture may not always be visible, it will interfere with the tool's sensors. Please allow a few days for the wall to dry out.

⚠ WARNING Do not rely exclusively on the detector to locate items behind the scanned surface. Use other information sources to help locate items before penetrating the surface. Such additional sources include construction plans, visible points of entry of pipes and wiring into walls, such as in a basement, and in standard 41 and 61 cm stud spacing practices.

Always turn off the power when working near electrical wires.

SCANNING DIFFERENT SURFACES

StudSensor™ HD55 is for use on dry interior walls only.

Note: Sensing depth and accuracy can vary due to moisture, content of materials, wall texture, and paint.

StudSensor™ HD55 can scan effectively through most sheet materials, including:

- Bare wood flooring (in DeepScan™ mode)
- Linoleum on wood base
- Gypsum drywall over plywood sheathing
- Wallpaped walls (if dry)
- Textured ceilings if uniform thickness (place a thin piece of cardboard on ceiling and scan over it to avoid damage to texturing)
- StudSensor™ HD55 is not designed to scan materials such as:
 - Ceramic floor tile
 - Carpeting and padding
 - Wallpaper with metallic fibers
 - Freshly painted walls that are still damp (may take one week or longer to dry after application)
 - Lath and plaster walls
 - Foil covered insulation board
 - Glass or any other dense material
 - Concrete

3. SELECTING THE MODE


Move selector switch to the desired mode: StudScan for finding wood or metal studs or DeepScan™ for finding studs behind walls more than 19 mm thick.

Unit will remain off if Power button is not depressed.

4. FINDING A STUD

Always scan for studs with the scanner placed flat against the wall. Move the mode switch to StudScan, place the tool flat against the wall, then press and hold the Power button. Wait for beep to confirm calibration has completed before moving scanner.


Continue to hold the Power button, then slowly slide unit horizontally across the wall, left or right. As you begin to approach a stud, the outer Target Indication bars will begin to turn on.

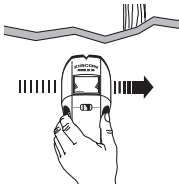

When the full Target Indication bars are first displayed across the display, the SpotLite™ Pointer and Target Spotlight shine, and a steady tone sounds, you have located the edge of the stud. Mark this spot.



Without releasing the Power button, continue scanning beyond the marked spot until some Target Indication bars turn off. Slide unit in the reverse direction to locate the other edge of stud.

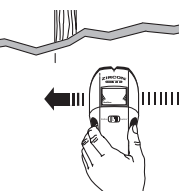


Mark this second spot. Centre of stud is midway between the two marks.



5. WIREWARNING™ DETECTION

WireWarning™ detection works continuously in StudScan and DeepScan™ modes. When live AC voltage is detected, the WireWarning™ indicator will appear on the display. If scanning begins over a live AC wire, the WireWarning™ indicator will flash continuously. Use extreme caution in these circumstances or whenever live AC is present.

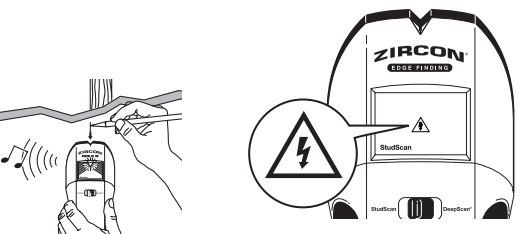

⚠ WARNING Electrical field locators may not detect live AC wires if wires are more than 51 mm from the scanned surface, in concrete, encased in conduit, present behind a plywood shear wall or metallic wall covering, or if moisture is present in the environment or scanned surface.

⚠ WARNING DO NOT ASSUME THERE ARE NO LIVE ELECTRICAL WIRES IN THE WALL. DO NOT TAKE ACTIONS THAT COULD BE DANGEROUS IF THE WALL CONTAINS A LIVE ELECTRICAL WIRE. ALWAYS TURN OFF THE ELECTRICAL POWER, GAS, AND WATER SUPPLIES BEFORE PENETRATING A SURFACE. FAILURE TO FOLLOW THESE INSTRUCTIONS MAY RESULT IN ELECTRIC SHOCK, FIRE, AND/OR SERIOUS INJURY OR PROPERTY DAMAGE.

6. HELPFUL HINTS (See also number 2, Operating Tips)

Situation	Probable Causes	Solutions
No indications. Faint screen.	<ul style="list-style-type: none"> • No studs in that area. • No battery in the unit. • Low Battery. 	<ul style="list-style-type: none"> • Move 12–13 cm to the left or right and start again. • Replace/insert brand new 9V alkaline battery.
Target Indication bars flash and the unit beeps continuously.	<ul style="list-style-type: none"> • Scan began on dense part of wall or over a stud. • Unit not flat against wall. • Unit tilted or lifted during scan. (All these factors affect proper calibration.) • Scanning surface is too dense or too wet for unit to operate. 	<ul style="list-style-type: none"> • Turn unit off, move over 5–8 cm, press Power button, and start again. • On rough surfaces, place a thin piece of cardboard on wall, scanning over it to help slide unit more smoothly. • Keep hand at least 15 cm from unit while you calibrate and scan. Hold unit with thumb and index finger no higher than handgrips. Be careful not to move your fingers after calibration. • Always hold unit parallel to the stud and move it perpendicular to the stud you're trying to locate. • If you are using unit on a recently taped, painted, or wallpapered wall, allow time to dry and try again.
Unable to detect studs in StudScan mode. Middle (inner) Target Indication bars do not turn on, or flash, in StudScan mode.	<ul style="list-style-type: none"> • Wall is particularly thick or dense. 	<ul style="list-style-type: none"> • Switch to DeepScan™ mode to locate the stud. • Interpret the set of Target Indication bars closest to the centre as stud edge.
The READY icon turns on but unit doesn't do anything else when scanning.	<ul style="list-style-type: none"> • Unit may not be flat against the wall. • If it is in the DeepScan™ mode (DeepScan™ is lit), you may have calibrated over a stud. 	<ul style="list-style-type: none"> • Hold unit so two Velcro® strips on the back make contact with wall. • Recalibrate unit in a different place and re-scan area.
Working in DeepScan™ mode and can't detect studs.	<ul style="list-style-type: none"> • You may have calibrated over a stud. (The error condition is disabled in DeepScan™ mode because it is twice as sensitive as StudScan.) • You may be holding the unit like a TV remote, aiming it at the wall. 	<ul style="list-style-type: none"> • Move unit over 5–8 cm and recalibrate. • Hold unit so two Velcro® strips on the back make contact with wall.
Detects other objects besides studs.	<ul style="list-style-type: none"> • Electrical wiring and metal or plastic pipes may be near or touching back surface of wall. 	<ul style="list-style-type: none"> • Check for other studs equally spaced to either side 30, 41, or 61 cm apart or for the same stud at several places directly above or below the first scan area.
You suspect electrical wires, but do not detect any.	<ul style="list-style-type: none"> • Wires may be shielded behind metallic wall coverings, plywood shearwall, or other dense material, or in conduit. • The wires may not be live. • Wires deeper than 51 mm from surface may not be detected. 	<ul style="list-style-type: none"> • Use extra caution if the area has plywood, thick wood backing behind drywall, or thicker-than-normal walls. • If a switch controls an outlet, make sure it is ON for detection, but turned off when working near electrical wires. <p>Always turn off power when cutting, nailing, or drilling near electrical wires.</p>

DeepScan, SpotLite, StudSensor, WireWarning, and Zircon are registered trademarks or trademarks of Zircon Corporation.

Visit www.zircon.com/support for the most current instructions.

ZIRCON

LIMITED 1 YEAR WARRANTY

Zircon Corporation, ("Zircon") warrants this product to be free from defects in materials and workmanship for one years from the date of purchase. Any in-warranty defective product returned to Zircon™, freight prepaid with proof of purchase date and \$5.00 to cover postage and handling, will be repaired or replaced at Zircon's option. This warranty is limited to the electronic circuitry and original case of the product and specifically excludes damage caused by abuse, unreasonable use or neglect. This warranty is in lieu of all other warranties, express or implied, and no other representations or claims of any nature shall bind or obligate Zircon. Any implied warranties applicable to this product are limited to the one year period following its purchase. IN NO EVENT WILL ZIRCON BE LIABLE FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM POSSESSION, USE OR MALFUNCTION OF THIS PRODUCT.

In accordance with government regulations, you are advised that: (i) some states do not allow limitations on how long an implied warranty lasts and/or the exclusion or limitation of incidental or consequential damages, so the above limitations and/or exclusions may not apply to you, and further (ii) this warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Return product freight prepaid with proof of purchase date (dated sales receipt) and \$5.00 to cover postage and handling, to:
Zircon Corporation
*Attn: Returns Department
1580 Dell Avenue
Campbell, CA 95008-6992 USA

Be sure to include your name and return address. Out of warranty service and repair, where proof of purchase is not provided, shall be returned with repairs charged C.O.D. Allow 4 to 6 weeks for delivery.

Customer Service, 1-800-245-9265 or 1-408-963-4550
Monday–Friday, 8:00 a.m. to 5:00 p.m. PST
www.zircon.com • info@zircon.com

f ZirconCorporation **u** YouTube ZirconTV
t ZirconTools | ZirconToolPro **W** ZirconTools

© 2015 Zircon Corporation • PIN 66283 • Rev A 02/15

